

# SB22 Slender Blender



## First Use Safety Recommendation


Please read through this booklet for safe and efficient use of the appliance. We urge you to read the "Important Safeguards" section and also follow all detailed instructions even if you are familiar with a similar appliance.

Keep this guide handy for future reference.

## **IMPORTANT SAFEGUARDS**

While using electrical appliances, in order to reduce the risk of fire, electric shock, and / or injury to persons, basic safety precautions should be followed, including the following:

- Read all instructions carefully, even if you are familiar with the appliance.
- To protect against the risk of electric shock, **DO NOT IMMERSE** the appliance, cord set or plug in water or other liquids.
- To clean, wipe the exterior with a damp cloth.
- Close supervision is necessary when any appliance is used near children. Never leave an appliance unattended when in use.
- Switch off and remove the plug from the power outlet when not in use, before assembling or disassembling parts or during cleaning. Never pull the cord.
- Do not operate any appliance with a damaged cord or plug, or after the appliance malfunctions, or is dropped or damaged in any manner. Return the complete appliance to your nearest authorized service facility for examination, electrical repair, mechanical repair or adjustment to avoid any hazard.
- The use of attachments or accessories not recommended or sold by this appliance manufacturer may result in fire, electric shock or personal injury.
- Do not let the cord hang over the edge of a table, counter, or touch hot surfaces.
- Avoid touching hot surfaces, use handles and knobs.
- Do not operate or place any part of this appliance on or near any hot surfaces (such as gas or electric burner or in a heated oven).
- Do not abuse the cord. Never carry the appliance by the cord or yank it to disconnect it from the outlet; instead, grasp the plug and pull to disconnect.
- When using an extension cord with your appliance, make sure the extension cord is correctly wired, and rated for its use.
- This product is intended for household use only.
- Do not attempt to repair the appliance yourself; instead, take it to your Black & Decker-owned or Authorized Service Centre for repair.

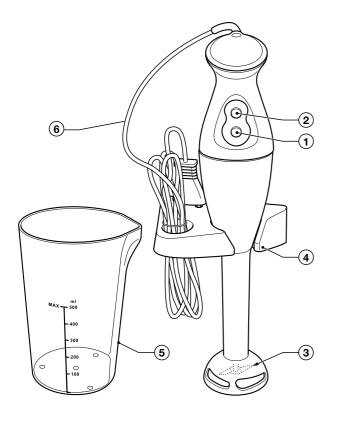

## Parts Identification

- 1. Low speed button
- 2. High speed button
- 3. Cutting blade
- 4. Wall bracket
- 5. Measuring jug
- 6. Power Cord

#### Your SB22 Slender Blender Features

- 500ml measuring jug ideal for everyday use
- 2 Speed Pulse Switch gives better operational control
- Soft rubber Pulse Switch offers ease of use
- Stainless steel multifunctional blade ensures high efficiency and easy cleaning
- Wall bracket (accessory) provides for convenient storage

## How to use your SB22 Slender Blender

Your SB22 Slender Blender has been designed for blending, mixing, and chopping food and beverage ingredients. This product is intended for household use only.

Before first use, wipe off the handle with a damp cloth. Wash the shaft and stainless steel blade in a warm sudsy of water, be careful not to submerge the body above the shaft. Dry thoroughly.

Plug the power cord into electricity supply. Please ensure that electricity ratings of your power point match that of SB22. Place the ingredients into the measuring jug or a suitable container. Use the low speed setting for stirring and mixing, the high speed setting for chopping. Using a stabbing motion, push the blades into the ingredients until the correct consistency is reached.

When blending liquids or fluid ingredients, use short pulses to prevent spillages. Keeping the blades submerged will help to prevent spillage. Take extra care when blending **hot ingredients**.

Do not operate the appliance continuously for more than 1 minute. After operating the appliance continuously for 1 minute, let it cool down for at least 5 minutes before operating it again.

### How to care for your SB22 Slender Blender

Before cleaning and maintenance, switch the appliance off and unplug it. Wash the blades and the measuring jug in warm soapy water and dry well. Be careful as the blades are sharp. Wipe the motor unit with a damp cloth. Do not use any abrasive or solvent-based cleaner. Do not attempt to sharpen the blades as this could damage them. The wall bracket can be used to store the appliance out of children reach.

#### Some Do's and Don'ts

- 1. Do not touch moving parts.
- 2. Always allow the motor to stop before approaching the blades.
- 3. Keep your fingers, long hair, loose clothes and the supply cord away from moving parts.
- 4. Handle the blade with care. as it is sharp.
- 5. Never pull the power supply cord to disconnect the plug from the socket.
- 6. Keep the power supply cord away from heat, oil and sharp edges.
- 7. Do not place the appliance on or near heat sources or in a heated oven.
- 8. Do not use the appliance outdoors. Always protect the motor unit from water or excessive humidity.
- 9. Operate the appliance only with dry hands.
- 10. If the power supply cord is damaged during use, disconnect the appliance from the power supply immediately. Do not touch the power supply cord before disconnecting from the power supply.

## كيفية الإعتناء بالخلاط اليدوي إس بي٢٢


قبل التنظيف والصيانة، أطفئ الجهاز واسحب كبل تزويد الطاقة من مقبس الكهرباء. إغسل الشفرات وابريق القياس في ماء دافئ وصابون ثم جففهما. إنتبه لأن الشفرات حادة. إمسح وحدة المحرك بقطعة قماش مبللة. لا تستعمل أية منظفات كاشطة أو ذات أساس مذيب. لا تحاول أن تشحذ الشفرات لأن ذلك قد يتلفها. يمكن استعمال سناد الحائط لحفظ الجهاز بعيداً عن متناول الأطفال.

## نصائح مفيدة

- ١ لا تلمس الأجزاء المتحركة.
- ٢ تأكد دائماً من توقف المحرك قبل الاقتراب من الشفرات.
- تأكد من إبقاء أصابعك، الشعر الطويل، الملابس الفضفاضة وكبل تزويد الطاقة بعيداً عن
  الأجزاء المتحركة.
  - ٤ إنتبه عند لمس الشفرة لأنها حادة.
  - ٥ لا تسحب كبل تزويد الطاقة لفصل الجهاز عن مقبس الكهرباء.
  - ٦ تأكد من إبقاء كبل تزويد الطاقة بعيداً عن الحرارة والزيت والحواف الحادة.
    - ٧ لا تضع الجهاز فوق أو قرب مصدر للحرارة أو في فرن ساخن.
- ٨ لا تستعمل الجهاز خارج المنزل. تأكد دائماً من حماية المحرك من الماء أو الرطوبة الزائدة.
  - ٩ تأكد من جفاف يديك عند استعمال الجهاز.
- ۱۰ إذا تعرض كبل تزويد الطاقة للتلف أثناء الاستعمال، إفصل الجهاز عن مصدر الطاقة فوراً. لا تلمس كبل تزويد الطاقة قبل فصل الجهاز عن مصدر الطاقة.

# وصف الأجزاء

- ١- زر السرعة المنخفضة
  - ٢- زر السرعة العالية
    - ٣- شفرة التقطيع
    - ٤- سناد للحائط
    - ٥- إبريق للقياس
  - ٦- كبل تزويد الطاقة

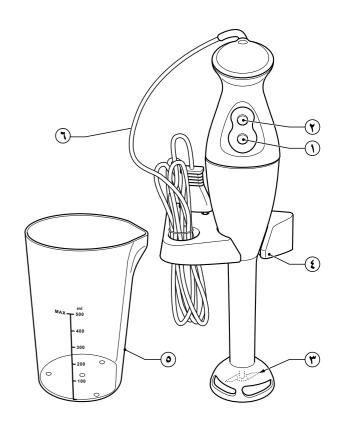

## مزايا الخلاط اليدوي إس بي٢٢

- إبريق للقياس ٥٠٠ مل للإستعمال اليومي
- مفتاح نابض بسرعتين يعطي التحكم الأفضل في التشغيل
  - مفتاح نابض من المطاط الطري لسهولة الاستعمال
- شفرة متعددة الوظائف من الفولاذ عديم الصدأ تضمن الكفاءة العالية وسهولة التنظيف
  - سناد للحائط (قطعة ملحقة) يوفر التخزين الملائم

## طريقة استعمال الخلاط اليدوي إس بي٢٢

إن الخلاط اليدوي إس بي٢٢ مصمم لخلط ومزج وتقطيع مكونات الأطعمة والمشروبات، وهو مخصص للإستعمال المنزلى.

قبل استعمال الجهاز لأول مرة، إمسح المقبض بقطعة قماش مبللة. إغسل عمود التدوير والشفرة بالماء الدافئ والصابون مع التأكد من عدم غمر الهيكل فوق عمود التدوير. جفف القطع جيداً.

ضع كيبل تزويد الطاقة في مقبس الكهرباء. تأكد من أن عيار الكهرباء في منزلك مطابق لجهاز إس بي٢٢. ضع المكونات في إبريق القياس أو في وعاء مناسب. إستعمل السرعة المنخفضة للتحريك والمزج والسرعة العالية للتقطيع. بحركة مماثلة للطعن، إدفع الشفرات داخل المكونات حتى يتم تحقيق الكثافة المطلوبة.

عند مزج السوائل أو المكونات السائلة، إستعمل النبضات القصيرة لمنع تناثر المكونات. إن إبقاء الشفرات مغمورة يساعد على منع التناثر. يجب الإهتمام بشكل خاص عند مزج المكونات الساخنة.

لا تستعمل الجهاز بشكل متواصل لأكثر من دقيقة واحدة. بعد تشغيل الجهاز بشكل متواصل لأكثر من دقيقة واحدة، إتركه لمدة ٥ دقائق على الأقل حتى يبرد قبل أن تستعمله من جديد.

# 

أثناء استعمال الأجهزة الكهربائية، ومن أجل تقليل خطر الحرائق، والصدمة الكهربائية و/أو إصابة الأشخاص، يجب الالتزام باحترازات احتياطية للسلامة، ومنها ما يلي:

- اقرأ كافة التعليمات بدقة حتى وإن كنت ملماً بالجهاز.
- للحماية من الصدمة الكهربائية، لا تغمر الجهاز أو مجموعة الأسلاك أو القابس في الماء أو سوائل أخرى.
  - لتنظيف الجهاز، امسح الجزء الخارجي بقطعة قماش رطبة.
  - يجب توخي الحذر الشديد عند استعمال الجهاز على مقربة من الأطفال. لا تترك الجهاز بدون مراقبة أثناء استعماله.
  - اطفئ الجهاز وأخرج القابس من مصدر التيار الكهربائي عندما لا تستعمله، وقبل جمع أو تفكيك الأجزاء أو أثناء التنظيف. لا تسحب السلك على الإطلاق.
  - لا تشغل أي جهاز بسلك أو مقبس تالف أو بعد عطل الجهاز، أو سقوطه أو تضرره بأية طريقة من الطرق. أعد الجهاز بكامله إلى أقرب وحدة خدمة معتمدة لغرض إجراء الفحص عليه، أو تصليحه من الناحية الكهربائية أو الميكانيكية أو تعديله تجنباً لأى خطر.
    - إن استعمال ملحقات لم يوصى بها أو لم تبعها الجهة المصنعة لهذا الجهاز قد يؤدي إلى حدوث حرائق أو صدمة كهربائية أو إصابة للأشخاص.
      - لا تدع السلك يتدلى على حافة الطاولة أو المنضدة أو يلمس سطوحاً ساخنة.
        - تجنب لمس السطوح الساخنة، واستعمل المقابض.
      - لا تشغل أو تضع أي جزء من هذا الجهاز على أو بالقرب من أي سطح ساخن (مثل طباخ الغاز أو الكهرباء أو في فرن ساخن).
    - لا تعبث بالسلك، ولا تحمل الجهاز عن طريق السلك أو تفصله بعنف عن مصدر التيار، وبدلاً من ذلك، امسك المقبس واسحبه لفصل الجهاز.
  - عند استعمال سلك وصلة إضافي مع جهازك، تأكد من أن سلك الوصلة مربوط بطريقة صحيحة ومناسب للاستعمال.
    - يستعمل هذا المنتج للأغراض المنزلية فقط.
    - لا تحاول إصلاح الجهاز بنفسك بل يفضل أن تأخذه إلى مركز بلاك آند ديكر أو مركز الخدمة المعتمد لتصليحه.

# احفظ هذه التعليمات

# ضمان شامل لمدة سنتين لأجهزة BLACK & DECKER المنزلية

تمنح Black & Decker ضماناً شاملاً مدته سنتين لهذا المنتج اعتباراً من تاريخ الشراء.

يغطي الضمان عيوب التصنيع أو المواد الداخلة في التصنيع. وفي حالة إصابة المنتج بأي عطل أثناء فترة الضمان، ستقوم شركة بإصلاحه أو (وفقاً لتقدير Black & Decker ) استبداله مجاناً.

لا يغطي الضمان الأعطال الناتجة عن الحوادث، سوء الاستعمال، الإهمال، الاستعمال الخاطئ، أو عدم اتباع النظم المعمول بها محلياً. كذلك، لا تنطبق شروط الضمان إذا تمت صيانة أو تصليح المنتج لدى طرف غير معتمد من قبل شركة Black & Decker ، أو في حالة استخدام قطع غيار بدون الرجوع إلى الشركة أو الحصول على موافقتها، وتسببت هذه القطع في العطل. وإذا توقف إنتاج أي طراز مع عدم وجود البديل المناسب، فإن لشركة Black & Decker حق اختيار إصلاح المنتج أو استبداله بطراز آخر بنفس القيمة الشرائية.

#### عند الشراء

املاً بطاقة تسجيل الضمان مع التأكد من وجود الختم الأصلي للتاجر المعتمد (وتوضيح تاريخ الشراء) ثم ارفق إيصال الشراء بالبطاقة. الرجاء الاحتفاظ بهما لإبرازهما في حالة وجود مطالبات في المستقبل.

#### عملية المطالية

خذ المنتج المعطل مع بطاقة الضمان وإيصال الشراء بنفسك إلى مركز الصيانة المحلي أو يمكنك إرساله بالبريد المدفوعة أجرته سلفاً. وفي حالة إرسال الجهاز بالبريد أو الشحن، تأكد من تفريغ المنتج من الماء كلياً وقم بتغليفه جيداً في صندوق كرتون مقوى مع إضافة مواد تغليف لملىء الفراغات لتفادى إصابته بأى ضرر. ارفق ملاحظة تصف فيها المشكلة لمركز الصيانة وتأكد من كتابة عنوانك.

صُمم للاستعمالات المنزلية فقط.

## **BLACK & DECKER HOME APPLIANCE 2 YEAR WARRANTY**

Black & Decker provides a 2 Year Warranty for this product from the date of purchase against defects due to defective materials or workmanship. Motor/element burn-outs due to voltage fluctuations are not covered under warranty. If the product should become defective within the warranty period, Black & Decker will repair or (at Black & Decker's discretion) replace it free of charge.

The warranty provisions do not cover failure due to accident, misuse, abuse, negligence or non observation of local regulations on the part of the user. Equally, the warranty provisions do not apply where the appliance has been serviced by a person not authorized by Black & Decker or serviced with non-approved parts and this has contributed to the fault of the product. Superseded models without a replacement equivalent will either be repaired or (at Black & Decker's discretion) replaced with another product of similar retail value.

#### **UPON PURCHASE**

Fill in the Warranty Registration Card with the original Authorized Dealer's stamp (indicating date of purchase) and attach your purchase receipt to it. Retain in case of claims in the future.

#### **MAKING A CLAIM**

Take your defective product together with the Warranty Registration Card & purchase receipt to your local service Centre. You can either do this in person or send it freight prepaid. If mailing or shipping your appliance, ensure and remove all the water and pack it carefully in a sturdy carton with enough packing material to prevent damage. Include a note describing the problem to the service Centre and be sure to give your return address.

#### DESIGNED FOR DOMESTIC PURPOSES ONLY.

#### Names & Addresses for Black & Decker Service Concessionaries

Afghanistan: Ishan National Co., Opp. Ministry of Justice, Kabul Tel.: +93-2-2101727. Algeria: SARL Outillage Corporation, 04 Route De Dely Brahim Cheraga, Alger. Tel.: +213-21-364363/508 Fax: +213-21-369667. Bahrain: Fawaz Al Zayani, P.O.Box 26563, Adliya, Manama. **Tel.:** +973-17-715252/712756 **Fax:** +973-17-713789. **Bangladesh:** Ultra Corporation, 8, Kushol Centre, Uttara, Dhaka 1230. Tel.: +880-2-8919272/9756 Ext.28 **Fax:** +880-2-9887167. **Egypt:** Anasia Egypt for Trading S. A. E., P.O.Box 2443, 110 Mostafa Refaat Street, Sheraton Heliopolis 11361, Cairo. Tel.: +20-2-2684159 Fax: +20-2-2684169. Ethiopia: Tewfik Sherif & Co. Ltd., P.O.Box 5583, Debre Zeit Road, Addis Ababa. Tel.: +251-1-651700/601 Fax: +251-1-650570. India: Gryphon Impex Pvt. Ltd., D-6/4, Okhla Industrial Area, Phase-I, New Delhi-110020. Tel.: +91-11-26372602-4 Fax: +91-11-26372601. Iran: Tehran - Service Centre of Iran, No 510, South Karger Ave, Below Pasteur Sq. Tehran. Tel.: +98-21-6490608/0656/6407672. Kish Island - Cayhan Electric Co., No. 69, Paradise Shopping Centre, Kish Island. Tel.: +98-76444-22894. Jordan: Bashiti Hardware, P.O.Box 1564, TLA Ali, Amman. Tel.: +962-6-5350009/4770741 Fax: +962-6-5350012/4789783. Kenya: Zylog Enterprises, IPS Building, Kuanda Street, P.O.Box 40877, Nairobi. Tel.: +254-2-338188/199 Fax: +254-2-330642. Kuwait: Al Omar Technical Co., P.O.Box 4062, 13041 Safat, Kuwait. Tel.: +965-4848595/0039 Fax: +965-4845652. Lebanon: Est. F.A. Kettaneh SA, P.O.Box 110242, Dora Highway, Kettaneh Building, Beirut. Tel.: +961-1-255860/6 Fax: +961-1-255891. Libya: El Ghoul Brothers, P.O.Box 348, Islamic Call Bldg., Office 201-202, Benghazi. Tel.: +218-61-9097681/4183 Fax: +218-61-9094123. Madagascar: Group Tana Confort S. A. R. L., B. P. 1770, Antananarivo. Tel.: +261-20-2264505 Fax: +261-20-2264244. Malta: John G. Cassar Ltd., 36 Victory Str, Qormi QRM 06, Malta. Tel.: +356-21-493251 Fax: +356-21-483231. Mauritius: Happy World Marketing Ltd., Block 2, Industrial Estate, Coromandel, P.O.Box 429, Port Louis Tel.: +230-2076700 Fax: +230-2337330/7400. Nepal: Universal Trading Centre, P.O.Box 1947, Tripureswor, Kathmandu Tel.: +977-1-262192/260587/785 Fax: 261154. Nigeria: Amin Bros. Eng. Co. Ltd., 30A (Plot 1291), Akin Adesola Street, Victoria Island, Lagos. Tel.: +234-1-3201778 Fax: +234-1-2613667. Oman: Oman Mktg. & Service Co., P.O.Box 2734, Ruwi, Muscat. Tel.: +968-560232 Fax: +968-560255. Pakistan: Karachi - Ammar Service & Spares, 60, Bank Arcade, Serai Road, Karachi +92-21 Tel.: 2426905 Fax: 2427214/5243. Pakistan: Lahore - Electronics Inn, 212-G Raja Centre, Main Market, Gulberg, Lahore. Tel.: +92-42-5756750. Philippines: Modern House International Enterprises, 213 Rizal Ave. Extension, between 2nd and 3rd Ave. Kalookan City. Tel.: +632 366-4487, Fax: +632 366-4489. Qatar: Al Muftah Trading & Cont., P.O.Box 875, Doha. Tel.: +974-4650880/4446868 Fax: +974-4441415. Saudi Arabia: Dammam - Ebrahim Fawaz Al Zayani, P.O.Box 76026, Al Raka, Dammam. Tel.: +966-3-8140914 Fax: +966-3-8140824. Jeddah - Anasia, P.O.Box 50959, Jeddah - 21477. Tel.: +966-2-6710014 Fax: +966-2-6725929. EAC (Al Yousuf) P.O. Box 30377, Jeddah - 21477. Tel.: +966-2-6519912 Fax: +966-2-6511153. Madina - Garziz Trdg. for Bldg. Mat. & Decor., P.O.Box 3364, Madina. Tel.: +966-4-8261490/8227636 Fax: +966-4-8265741 Riyadh - Anasia, P.O.Box 18689, Riyadh - 11425. Tel.: +966-1-2693751 Fax: +966-1-4501178. Yanbu - Bin Afif, P.O.Box 530 Yanbu, Al Bahr. Tel.: +966-4-3222626/8867 Fax: +966-4-3222210. Sri Lanka: Delmege Gen. Equip. Pvt. Ltd., No. 428/1AT. B., Jaya Mawatha (Darley Road), Colombo-10. Tel.: +94-11-2665914 Fax: +94-11-2665915. Sudan: United Distribution Company, P.O.Box 325, Sayed Abdul Rehman Street, Khartoum. Tel.: +249-11-772612/777296 **Fax:** +249-11-770919. **Tanzania**: General Motors Investment, P. O Box 16541, 14 Vingunguti Nyerere Road, Dar Es Salaam. **Tel.**: +255-22-2862661/5022 **Fax:** +255-22-2862667/5412/3. **Tunisia**: Sfax - Techni Sud, 68, Rue d'Algerie, Sfax. Tel.: +216-4-226335. Tunis - Souissi Ace Home Centre, Zone Industrielle, Megrine (Saint Gobain), Z4 - Tunis. Tel.: +216-1-428038 Fax: + 216-1-429540/330. UAE: Abu Dhabi - Light House Electric., P.O.Box 120, Abu Dhabi. Tel.: +971-2-6726131 Fax: +971-2-6720667. Dubai - Black & Decker (O) A.G., P.O.Box 5420, Dubai. Tel.: +971-4-7028234/233 Fax: +971-4-2822765. Ideal Mach. & Equipt. R. W/shop P.O.Box 37116, Al Quoz, Dubai. Tel.: +971-4-3474160 Fax: +971-4-3474157. Sharjah - McCoy Middle East LLC, P.O.Box 20228, Sharjah. Tel.: +971-6-5336321 Fax: +971-6-5336320. Uganda: The Building Centre, Kitgum House, 52 Station Road, P.O.Box 7436, Kampala. Tel.: +256-41-234567 Fax: +256-41-236413. Yemen: Aden -Middle East Trad. Co. Ltd., Mulla Dakka, Aden. Tel.: +967-2-240950 Fax: +967-2-240952. Sana'a - Middle East Trad. Co. Ltd., P.O.Box 12363, Hayel Street, Sana'a. **Tel.:** +967-1-204201 **Fax:** +967-1-204204. Taiz - Middle East Trad. Co. Ltd., Campa area near Al-Kair mosque, Taiz. Tel.: +967-4-231610/232033 Fax: +967-4-219869. Zimbabwe: J.D.Distributors, P.O.Box 226, 17 Bessemer Road, Graniteside, Harare Tel.: +263-4-753913-7 Fax: 753918

<b>BLACK &amp; DECKER</b> :	WARRANTY REGISTRATION CARD
YOUR NAME/الإســم	
YOUR ADDRESS العنوان	
POSTCODE الرمز البريدي	
DATE OF PURCHASE تاريخ الشراء	
إسم و عنوان البائع/DEALER'S NAME & ADDRESS	
PRODUCT MODEL NO. SB22	